



## 905 HEART RATE MONITOR

SP1971IS01SPO.indd 11

**SP1971IS01SP0** 5.5" × 4" 7/3112 Ron 8/9/12 9:46 AM

## TABLE OF CONTENTS

MAIN OPERATING MODES

INTRODUCTION	1
HOW TO USE THIS MANUAL	1
ACTIVATING THE WATCH FROM POWER DOWN MODE	1
WARNINGS & CAUTIONS	2
CARE & MAINTENANCE	3
CUSTOMER SUPPORT	3
WATCH FUNCTIONS	4
KEYS AND THEIR FUNCTIONS	5-6
ACQUIRING HEART RATE	7
MAIN OPERATING MODES	
DEACTIVATING TOUCH HEART RATE	8
RESETTING THE WATCH	8
VIEWING THE BACKLIGHT	8
MAIN OPERATING MODES	9

## TABLE OF CONTENTS

SETTING & OPERATING THE WATCH	
SETTING TIME & DATE	10
SETTING PERSONAL PROFILE	11
SETTING DAILY ALARM	12
OPERATING CALORIES/EXERCISE TIMER	13
RANGES & SPECIFICATIONS	14
REPLACING THE WATCH BATTERY	15
BATTERY SAFETY INFORMATION	16
TROUBLE SHOOTING	17
WARRANTY	18
FCC COMPLIANCE	19

905 Heart Rate Monitor

SP1971 ISO1 SPO. indd 12-13

8/9/12 9:46 AM

## INTRODUCTION

Congratulations on your purchase of a Sportline Personal Fitness Monitor. Please keep in mind; your watch is a sensitive technical instrument. With proper care and maintenance, it will last for many years. However, improper care and handling can cause the various sensors to be damaged and to stop functioning.

#### HOW TO USE THIS MANUAL

Sportline Personal Fitness Monitors have many unique features and functions. Please read all sections of this manual carefully and become fully familiar with the operation of the watch before using it in the field. Proper setup and operation will greatly enhance the usefulness and your enjoyment of the watch. The manual is divided into sections outlining each of the major functions of the watch. A drawing of the watch screen that represents the starting point or other important screens for each operational process are shown adjacent to the instructions for the process; important keys are shown indicating **PRESS & HOLD** and **PRESS**.

The steps for the programming or operation are adjacent to the screen illustration. Key points and important information are shown in highlighted blocks.

#### ACTIVATING THE WATCH FROM POWER DOWN MODE

**PLEASE NOTE:** Your watch was originally shipped in Power Down Mode to conserve battery life. To deactivate Power Down mode: **PRESS & HOLD ANY KEY** for 5 seconds (see "Resetting the Watch" section on page 8 for more info on power down mode).

## WARNINGS & CAUTIONS

**WARNING:** Before starting any exercise program or performing any vigorous physical activity, we strongly suggest you visit your doctor for a complete physical and to discuss your plans.

**CAUTION:** Your watch is designed to be water resistant to a static pressure of 5 ATM and can be worn while showering and light swimming. However, we recommend that extensive use of the unit in the water be avoided whenever possible. Care should be taken not to press any keys while the unit is submerged as this can force moisture past the key seals and damage the unit.

CAUTION: Avoid exposing your watch to extreme conditions for a prolonged period of time.

CAUTION: Avoid rough usage or severe impacts to your watch.

DO NOT use hand cream as it will insulate the signal between the skin and sensor contacts.

**DO NOT** use the fingertips where the skin is dry and thick. For those with extremely dry skin, moisten fingers and wrist with tap water or a conductive gel.

**CLEAN** the back cover occasionally by using a damp cloth. Then wipe dry to remove any residual grease. **CLEAN** your skin and fingers with soap and water for a better signal transmission.

AVOID doing awkward motions during measurement. It may create inaccurate heart rate readings.



SP197(1)801SPO.indd 21-22

## **CARE & MAINTENANCE**

- NEVER attempt to disassemble or service your unit.
- DO NOT expose the unit to extreme heat, shocks, magnetic fields, electrical noise, strong vibration or long-term exposure to direct sunlight.
- **DO NOT** drop or step on the watch.
- TO CLEAN THE UNIT: wipe with a lightly moistened cloth. Apply mild soap to the area if there are stubborn stains or marks. Do not expose the unit to strong chemicals such as gasoline, cleaning solvents, acetone, alcohol or insect repellents, as they may damage the unit's seal, case and/or finish.
- STORE the unit in a dry place when you are not using it.

#### CUSTOMER SUPPORT

If you experience any problems with this product or have questions, please first contact our Customer Service Team at 1-866-694-4575. We are ready to help.

## WATCH FUNCTIONS

## TIME

- Time/Day/Date/Month
- 12/24-hour formats
- Daily Alarm

#### **HEART RATE**

- ECG Accurate Heart Rate
- Calorie Consumption

#### **EXERCISE TIMER**


- 1/100 second resolution
- 100-hr

#### OTHER

EL Backlight SystemWater Resistant 50m (165ft)



## **KEYS AND THEIR FUNCTIONS**

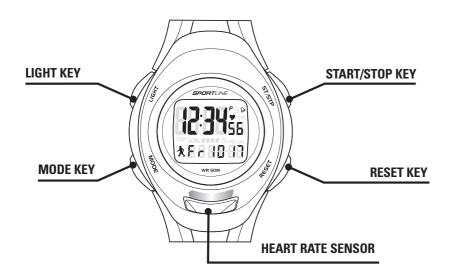

## **KEYS AND THEIR FUNCTIONS**

#### **MODE KEY**

- Scroll through operating modes
- Advance through variables in setting sequence
- PRESS & HOLD: Enter/Exit the programming
- Exit Finger Touch Heart Rate mode

#### START/STOP KEY (S/S)

- Start/Stop Calories/Exercise Timer
- Increase setting values during programming sequence

#### **RESET/HR LOCK KEY (RESET OR R)**

- Reset Calories/Exercise Timer
- Decrease setting values during programming sequence

#### **HEART RATE SENSOR**

• PRESS & HOLD: Activates Heart Rate

#### LIGHT KEY

• Activates (EL) backlight system



## ACQUIRING HEART RATE

#### **ACQUIRING HEART RATE: FINGER TOUCH**

Heart rate may be acquired from any operating mode (not in any Setting Sequence).

- With the watch attached to your wrist, PRESS & HOLD the HEART RATE SENSOR with your index finger. NOTE: You may exit Heart Rate mode at any time by Pressing the Mode, Start/Stop or Reset key.
- 2. Continue PRESSING & HOLDING until heart rate displays.
- Once Heart Rate is acquired, RELEASE THE SENSOR. Heart Rate will continue to display for a period of approximately 5 seconds.
- 4. If trouble acquiring heart rate, moisten the underside of the watch case (so contact between the wrist and watch is ensured). To activate heart rate, the watch's back plate must come into direct contact with your skin, while your fingertip is touching the top case.



NOTE: The Monitor displays both actual heart rate (in beats per minute) and percent of estimated maximum heart rate.

## MAIN OPERATING MODES

#### **RESETTING THE WATCH**

In rare circumstances, you may wish to completely reset the watch to factory defaults.

- 1. In Time mode, **PRESS & HOLD** the **MODE**, **START/LAP/STOP**, and **RESET/LOCK** buttons at the same time for 5 seconds. The watch will power down.
- 2. PRESS & HOLD ANY BUTTON for 5 seconds to turn the watch back on.

#### VIEWING THE BACKLIGHT SYSTEM

The Sportline 905 is equipped with an electroluminescent (EL) Backlight System for viewing the display in low light conditions. To operate the Backlight:

PRESS the LIGHT key. Backlight will illuminate for approximately 5 seconds.


**NOTE:** *Excessive use of Backlight System may significantly reduce battery life.* 

SP19711801SPO.indd 27-28

905 Heart Rate Monitor

## MAIN OPERATING MODES

The Sportline 905 has 6 main operating modes: Time, Personal Profile, Alarm, Chronograph, Countdown Timer and Calories/Exercise Timer. Scroll through main modes by **PRESSING** the **MODE** key. Acquire Finger Touch Heart Rate by **TOUCHING & HOLDING** the **HEART RATE SENSOR** in any operating mode.

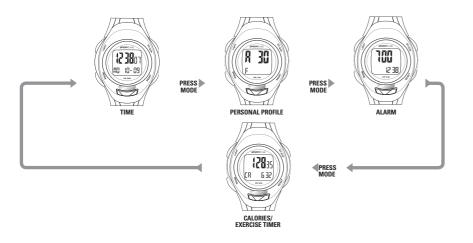

## **SETTING & OPERATING THE WATCH**

#### SETTING TIME AND DATE

In this Programming Sequence, you will program the Time & Calendar functions.

- In Time mode, PRESS & HOLD the MODE key to enter the programming sequence. The variable being adjusted will flash on and off.
- Reset Seconds to zero (00) by PRESSING the START/STOP (S/S) or RESET (R) key. Advance to Set Minutes by PRESSING the MODE key.
- Adjust Minutes by PRESSING S/S (to increase) or R (to decrease). Set Minutes and advance to Set Hour by PRESSING the MODE key.

ADJUST: S/S or R

12 38on

0 10-09

- Adjust Hour by PRESSING S/S or R. Set Hour and advance to Set Year by PRESSING the MODE key.
- 5. Adjust Year by PRESSING S/S or R. Set by PRESSING MODE.
- 6. Adjust Month by PRESSING S/S or R. Set by PRESSING MODE.
- 7. Adjust Day by PRESSING S/S or R. Set by PRESSING MODE.
- Adjust date format (month day or day month) by PRESSING S/S or R. Set Format by PRESSING MODE.
- 9. Adjust 12/24-hour format by **PRESSING S/S** or **R**. Set Format by **PRESSING MODE**.
- 10. Turn Key Beep ON or OFF by **PRESSING S/S** or **R**. Set by **PRESSING MODE**.
- 11. PRESS & HOLD the MODE key to exit the Programming Sequence & resume Operating mode.



SET: MODE

9 905 Heart Rate Monitor 10 SP197(18018PO.Indi 29-210 89712 9:46 AM

## **SETTING & OPERATING THE WATCH**

#### SETTING PERSONAL PROFILE

The Sportline 905 uses an advanced algorithm based on your Personal Profile to estimate your maximum heart rate and calculate calories burned. This sequence must be completed to ensure accuracy of the watch's functions.

- 1. In Personal Profile mode, **PRESS & HOLD** the **MODE** key to enter the programming sequence. The variable being adjusted will flash on and off.
- Adjust Age by PRESSING the START/STOP (S/S) or RESET (R) key. Advance to Set Gender by PRESSING the MODE key.
- Select Gender (M=male, F=female) by PRESSING the START/STOP (S/S) or RESET (R) key. Set Gender by PRESSING the MODE key.
- 4. PRESS & HOLD the MODE key to exit the Programming Sequence & resume Operating mode.



A 30

ADJUST: S/S or



## SETTING & OPERATING THE WATCH

#### SETTING DAILY ALARM

#### The Sportline 905 features a Daily Alarm. To set Alarm:

- 1. In Alarm mode, **PRESS & HOLD** the **MODE** key to enter the programming sequence.
- 2. Adjust Hour by pressing start/stop (s/s) or reset (r). Set by pressing mode.
- 3. Adjust Minutes by **pressing s/s** or **r**. Set by **pressing mode**.
- 4. PRESS & HOLD the MODE key to exit the Programming Sequence and return to Time mode.
- 5. Turn Alarm ON or Off by PRESSING the START/STOP (S/S) key. The Alarm icon ( (u=1) ) will be visible when activated.
- 6. Turn Hourly Chime ON or Off by **PRESSING** the **RESET (R)** key. The Chime icon ( <) will be visible when activated.



8/9/12 9:46 AM

12 905 Heart Rate Monitor

SP19711801SPO.indd 211-212

## **SETTING & OPERATING THE WATCH**

#### **OPERATING CALORIES/EXERCISE TIMER**

The Sportline 905 uses an advanced algorithm based on your Personal Profile to estimate your maximum heart rate and calculate calories burned. The monitor displays Total Exercise Time and Calories Burned (CA). To operate Calories/Exercise Timer: scroll thru main modes until you land on the calories/ exercise timer screen:

1. To START timing, PRESS the START/STOP (S/S) key.

2. To STOP timing, PRESS the S/S key.

3. To RESET the Exercise Timer, **PRESS** the **R** key.

**TIP:** The more frequent heart rate readings are taken, the more accurate the calories burned estimate will be.

Note: The exercise timer must be running for calories to be counted.



## **RANGES & SPECIFICATIONS**

### TIME

- AM, PM, hour, minute, second
- 12/24 hour format
- Calendar: month, date, day display with auto leap year adjustment

#### ALARM

- Daily alarm
- Alarm duration: 30 seconds

#### **EXERCISE TIMER**

Resolution: 1 second
Measuring range: 99 hours, 59 minutes, 59.99 seconds

#### HEART RATE

• Range: 40-200 beats per minute

#### OTHER

Electroluminescent (EL) backlight
Water resistant up to 50 meters
Battery: CR 2032



905 Heart Rate Monitor

13

## **REPLACING THE WATCH BATTERY**

The Sportline 905 uses a single CR2032 lithium battery.

# BATTERY REPLACEMENT WILL BE REQUIRED FROM TIME TO TIME, AND SHOULD OCCUR WHEN:

1. The display fades in part or completely

- 2. The heart rate function will not activate
- 3. Backlight System does not operate
- 4. The Low Battery icon is visible

To replace the battery of your Sportline 905, we recommend you take it to a watch repair service center or certified jeweler. This will ensure that the water resistance will be retained after battery replacement.

#### **CUSTOMER SUPPORT**

If you have questions, comments or need assistance with your Sportline 905 Heart Rate Watch, you may contact Customer Support by calling 1-866-694-4575.

## **BATTERY SAFETY INFORMATION**

#### ▲ CAUTION – BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged
- · Rechargeable batteries must be removed before recharging
- Rechargeable batteries should only be recharged under adult supervision
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries
- Exhausted batteries are to be removed
- Do not mix old and new batteries
- Do not dispose of batteries in fire; batteries may explode or leak
- Do not dispose of product in fire; batteries may explode or leak
- If this product will not be used for an extended period of time, remove the batteries from the product
- The supply terminals are not to be short-circuited
- Batteries are to be inserted with correct polarity
- Clean the battery contacts and also those of the product prior to battery installation
- · As always, dispose of batteries in an eco-friendly manner



The purpose of the crossed-out wheelie bin symbol is to remind us that most electrical products, and batteries, contain trace elements (including Mercury – Hg, Cadmium – Cd and Lead – Pb) which could be harmful to our environment and therefore our health. We must all be careful to dispose of them responsibly in a specifically designated way – either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) – this will help your local authority to arrange to recycle or dispose of them in the appropriate manner.

15

## **TROUBLE SHOOTING**

POTENTIAL CAUSES FOR NO HEART RATE READING OR LONG RESPONSE TIME:

#### CAUSE: DRY SKIN

**SOLUTION:** Apply conductive gel thoroughly to finger. Tap water may help if conductive gel is not available.

CAUSE: MUSCLE TREMORS CAUSED BY PRESSING ON SENSORS TOO HARD **SOLUTION:** Decrease finger pressure on the Sensor Pads.

#### CAUSE: DEAD SKIN ON WRIST OR FINGER.

**SOLUTION:** Bub off excessive dead skin with a towel

## CAUSE: A THIN LAYER OF BODY GREASE INSULATES THE ECG SIGNAL PREVENTING THE WATCH FROM DETECTING ECG HEART RATE

SOLUTION: Wipe wrist and the back of watch with a tissue or soft towel.

#### CAUSE: HAIRY SKIN **SOLUTION:** Apply conductive gel to wrist.

#### CAUSE: LOW BATTERY **SOLUTION:** Replace the battery in watch.

### WARRANTY

#### **GUARANTEE CERTIFICATE – FOR PURCHASES MADE IN THE U.S.**

If at any time within one (1) year from the purchase date of this product, it fails to perform properly because of defects in material or manufacturing, return it prepaid to: EB SPORT GROUP, 585 Oak Ridge Road, Hazleton, PA 18202

Complete this Guarantee Certificate and enclose it (or a copy of it) with the product. (PLEASE PRINT CLEARLY)

TEL

NAME ADDRESS CITY STATE PROBLEM WITH PRODUCT STORE PURCHASED FROM DATE OF PURCHASE PURCHASE PRICE

#### REPLACEMENT

This product has been carefully designed, manufactured and packaged. If any parts are missing or damaged, please contact us at the address above and we will replace the unit at no charge. (Guarantee does not cover crystal or battery.)

#### ©2012 Distributed by EB Sport Group, Hazleton, PA 18202

7IP

#### FOR PURCHASES MADE IN THE UK:

Should you experience problems with this item, please return it to the point of purchase. This will not affect your statutory rights. Alternatively return it to the address shown below for a repair/replacement.

EB Brands UK, Berkeley Business Park, Wainwright Road, Worcester WR4 9FA

www.sportline.com

Distributed in the UK by EB Brands UK, Worcester WR4 9FA



## FCC COMPLIANCE

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

1. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

2. **NOTE:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.





www.sportline.com Sportline® is a trademark of SPORTLINE, a division of EB Sport Group, Yonkers, NY 10701 Distributed in the United Kingdom by EB Brands (UK), Worcester, WR4 9FA All Rights Reserved. ©2012 SP1971IS01SP0

()

## 905 **HEART RATE MONITOR**

SP1971IS01SPO.indd 221

8/9/12 9:46 AM